

***ANEXO VIII***

***MAPA DAS A CHECKS***

***PÓS-EQUALIZAÇÃO***



| Amtoss          | Description                     | M/H | MEN | M/H | MEN | MPD interval |    |        |    |      | Interval | Off set | A1 | A2 | A3 | A4 | A5 | A6 | A7 | A8 | A9 | A10 | A11 | A12   | Acessos Abertos   |                                    |
|-----------------|---------------------------------|-----|-----|-----|-----|--------------|----|--------|----|------|----------|---------|----|----|----|----|----|----|----|----|----|-----|-----|---|---|------------------------------------|
| 256202-00-02-01 | OPC PILOT FLASH LIGHT           | 0,2 | 1   | 0   | 0   | 600          | FH | 600    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA  |                                    |
| 256300-00-50-01 | ELT EXPIRY DATE CHECK           | 0,2 | 1   | 0   | 0   | 0            | 0  | 0      | FH | 0 A  | 4A       | A1      | 6  |    |    | 6  |    |    |    | 6  |    |     |     |   | NA  |                                    |
| 256400-00-51-01 | LIFE VESTS                      | 0,5 | 2   | 0   | 0   | 0            | 0  | 0      | FH | 0 A  | 3A       | A2      |    | 6  |    | 6  |    |    | 6  |    |    | 6   |     |   | NA  |                                    |
| 256400-00-52-01 | SPARE LIFE VESTS                | 0,1 | 1   | 0   | 0   | 0            | 0  | 0      | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA  |                                    |
| 262400-00-03-01 | AFT LH TOILET FIRE EXT. CHECK   | 0,1 | 1   | 0   | 0   | 600          | FH | 600    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA  |                                    |
| 262400-00-03-02 | AFT RH TOILET FIRE EXT. CHECK   | 0,1 | 1   | 0   | 0   | 600          | FH | 600    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA  |                                    |
| 262400-00-03-03 | FWD TOILET FIRE EXT. CHECK      | 0,1 | 1   | 0   | 0   | 500          | FH | 500    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA  |                                    |
| 271300-00-02-01 | OPC SERVO VALVE STICKING        | 0,2 | 1   | 0   | 0   | 500          | FH | 500    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | 254AZ   |                                    |
| 273500-00-01-01 | OPC STALL WARN SYSTEM           | 0,8 | 1   | 0   | 0   | 1000         | FH | 1000   | FH | 2 A  | 2A       | A1      | 6  |    | 6  |    | 6  |    | 6  |    | 6  |     | 6   |   | 254AZ   |                                    |
| 274300-00-02-01 | OPC STAB STICKING CIRCUIT       | 0,1 | 1   | 0   | 0   | 500          | FH | 500    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | 254AZ   |                                    |
| 275001-00-01-01 | LH FLAP VANE LUBRICATION        | 0,5 | 1   | 0,2 | 1   | 1500         | FH | 1500   | FH | 3 A  | 4A       | A4      |    |    |    | 6  |    |    | 6  |    |    |     | 6   | 543BB, 543HB, 544BB, 544HB; FLAPS TO BE FULLY EXTENDE |   |                                    |
| 275001-00-01-02 | RH FLAP VANE LUBRICATION        | 0,5 | 1   | 0,2 | 1   | 1500         | FH | 1500   | FH | 3 A  | 4A       | A4      |    |    |    | 6  |    |    | 6  |    |    |     | 6   | 643BB, 643HB, 644BB, 644HB; FLAPS TO BE FULLY EXTENDE |   |                                    |
| 275300-00-05-01 | LH FLAP LUBRICATION             | 1,5 | 1   | 0,3 | 1   | 500          | FH | 500    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | 193CL, 533JL, 533KR, 535JR                                |                                    |
| 275300-00-05-02 | RH FLAP LUBRICATION             | 1,5 | 1   | 0,3 | 1   | 500          | FH | 500    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | 192CR, 633JR, 633KL, 635JL                                |                                    |
| 275300-00-07-01 | LH FLAP CARRIAGE & A-FRAME LUB  | 0,5 | 1   | 0,9 | 1   | 1000         | FH | 1000   | FH | 2 A  | 2A       | A2      |    | 6  |    | 6  |    |    | 6  |    |    |     | 6   |   | 193CL, 533DB, 533JL, 533KR, 535JR, 535KB                  |                                    |
| 275300-00-07-02 | RH FLAP CARRIAGE & A-FRAMES LUB | 0,5 | 1   | 0,9 | 1   | 1000         | FH | 1000   | FH | 2 A  | 2A       | A2      |    | 6  |    | 6  |    |    | 6  |    |    |     | 6   |   | 192CR, 633DB, 633JR, 633KL, 635JL, 635KB                  |                                    |
| 276100-00-01-01 | SPEEDBRAKE ACTUATOR             | 0,2 | 1   | 0,1 | 1   | 0            | 0  | 0      | FH | 0 A  | 2A       | A1      | 6  |    | 6  |    | 6  |    |    | 6  |    |     | 6   |   | 315AB   |                                    |
| 276400-00-02-01 | LH LIFTD MECH CTRL LUB          | 0,2 | 1   | 0,9 | 1   | 3000         | FH | 3000   | FH | 6 A  | 4A       | A2      |    | 6  |    |    | 6  |    |    |    |    | 6   |     |   | 532JB, 532KB, 532LB, 532MB, 532NB, 532PB, 532QB, 534CB, 5 |                                    |
| 276400-00-02-02 | RH LIFTD MECH CTRL LUB          | 0,2 | 1   | 0,9 | 1   | 3000         | FH | 3000   | FH | 6 A  | 4A       | A2      |    | 6  |    |    | 6  |    |    |    |    | 6   |     |   | 632JB, 632KB, 632LB, 632MB, 632NB, 632PB, 632QB, 634CB, 6 |                                    |
| 276400-00-03-01 | LIFTD ACCUMULATOR PRE-CHARGE    | 0,1 | 1   | 0,1 | 1   | 600          | FH | 600    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | 177CL, 314AR  |                                    |
| 276400-00-51-01 | LH LIFTD SYSTEM INSPECTION      | 0,2 | 1   |     |     | 0            | 0  | 0      | FH | 0 A  | 4A       | A2      |    | 6  |    |    | 6  |    |    |    |    | 6   |     |   | 532JB, 532KB, 532LB, 532MB, 532NB, 532PB, 532QB, 534CB, 5 |                                    |
| 276400-00-51-02 | RH LIFTD SYSTEM INSPECTION      | 0,2 | 1   |     |     | 0            | 0  | 0      | FH | 0 A  | 4A       | A2      |    | 6  |    |    | 6  |    |    |    |    | 6   |     |   | 632JB, 632KB, 632LB, 632MB, 632NB, 632PB, 632QB, 634CB, 6 |                                    |
| 291000-00-50-01 | HYD ENG 1 PUMP COUPLING SYST 1  | 0,1 | 1   | 0   | 0   | 0            | 0  | 0      | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA  |                                    |
| 291000-00-50-02 | HYD ENG 2 PUMP COUPLING SYST 2  | 0,1 | 1   | 0   | 0   | 0            | 0  | 0      | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA  |                                    |
| 291100-00-01-01 | HYDR. FILTER POP-OUTS           | 0,1 | 1   | 0,1 | 1   | 600          | FH | 600    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | 314AR   |                                    |
| 291100-00-04-01 | ELECT. PUMP SEAL DRAIN          | 0,1 | 1   | 0,1 | 1   | 600          | FH | 600    | FH | 1 A  | 2A       | A1      | 6  |    |    | 6  |    |    | 6  |    |    |     | 6   |   | 314AR   |                                    |
| 291200-00-01-01 | HYDRAULIC SYSTEMS WATER DRAIN   | 0,1 | 1   | 0,1 | 1   | 300          | FH | 300    | FH | 1 A  | 1A       | A1      | 4  | 4  | 4  | 4  | 4  | 4  | 4  | 4  | 4  | 4   | 4   | 4   | 4   | 314AR, 314CR                       |
| 291300-00-04-01 | NLG BAY CHECK                   | 0,2 | 1   | 0   | 0   | 500          | FH | 500    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA  |                                    |
| 291300-00-05-01 | LH MLG WHEEL BAY CHECK          | 0,1 | 1   | 0   | 0   | 500          | FH | 500    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | MAIN LANDING GEAR DOOR TO BE OPENED                       |                                    |
| 291300-00-05-02 | RH MLG WHEEL BAY CHECK          | 0,1 | 1   | 0   | 0   | 500          | FH | 500    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | MAIN LANDING GEAR DOOR TO BE OPENED                       |                                    |
| 291300-00-06-01 | LH MLG STRUT BAY CHECK          | 0,1 | 1   | 0   | 0   | 500          | FH | 500    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA  |                                    |
| 291300-00-06-02 | RH MLG STRUT BAY CHECK          | 0,1 | 1   | 0   | 0   | 500          | FH | 500    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA  |                                    |
| 291300-00-07-01 | HYDR TUNNEL INSPECTION #1       | 0,1 | 1   | 0   | 0   | 500          | FH | 500    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | MAIN LANDING GEAR DOOR TO BE OPENED                       |                                    |
| 291300-00-07-02 | HYDR TUNNEL INSPECTION #2       | 0,1 | 1   | 0   | 0   | 500          | FH | 500    | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | MAIN LANDING GEAR DOOR TO BE OPENED                       |                                    |
| 301100-00-01-01 | OPC WING ANTI ICING             | 0,1 | 1   | 0   | 0   | 2000         | FH | 2000   | FH | 4 A  | 4A       | A3      |    |    | 6  |    |    | 6  |    |    |    | 6   |     |   | 254AZ   |                                    |
| 301200-00-01-01 | OPC TAIL ANTI ICING             | 0,1 | 1   | 0   | 0   | 2000         | FH | 2000   | FH | 4 A  | 4A       | A3      |    |    | 6  |    |    | 6  |    |    |    | 6   |     |   | 254AZ   |                                    |
| 304100-01-01-01 | WINDOW A-ICE INDICATION         | 0,1 | 1   | 0   | 0   | 300          | FH | 300    | FH | 1 A  | 1A       | A1      | 5  | 5  | 5  | 5  | 5  | 5  | 5  | 5  | 5  | 5   | 5   | 5   | 254AZ   |                                    |
| 314100-00-01-01 | PROX SWITCH SYSTEM              | 0,1 | 1   | 0   | 0   | 600          | FH | 600    | FH | 1 A  | 1A       | A1      | 3  | 3  | 3  | 3  | 3  | 3  | 3  | 3  | 3  | 3   | 3   | 3   | 3   | 254AZ; GET ACCESS TO AVIONICS RACK |
| 315100-00-01-01 | OPC FLIGHT WARN SYSTEM          | 0,1 | 1   | 0   | 0   | 1200         | FH | 1200   | FH | 2 A  | 4A       | A2      |    | 6  |    |    | 6  |    |    |    |    | 6   |     |   | NA  |                                    |
| 321100-00-04-01 | LH MLG LUBRICATION              | 0,2 | 1   | 0   | 0   | 750          | FC | 1162,5 | FH | 2 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | MAIN LANDING GEAR DOOR TO BE OPENED                       |                                    |
| 321100-00-04-02 | RH MLG LUBRICATION              | 0,2 | 1   | 0   | 0   | 750          | FC | 1162,5 | FH | 2 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | MAIN LANDING GEAR DOOR TO BE OPENED                       |                                    |
| 321100-00-05-01 | LH MLG TORQUE LINK LUBRICATION  | 0,1 | 1   | 0   | 0   | 500          | FC | 775    | FH | 2 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA  |                                    |
| 321100-00-05-02 | RH MLG TORQUE LINK LUBRICATION  | 0,1 | 1   | 0   | 0   | 500          | FC | 775    | FH | 2 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA  |                                    |
| 321100-00-08-01 | LH MLG TORQUE LINK PLAY         | 0,2 | 1   | 0   | 0   | 5000         | FC | 7750   | FH | 16 A |          |         |    |    |    |    |    |    |    |    |    |     |     |   | NA  | Remover dos A checks               |
| 321100-00-08-02 | RH MLG TORQUE LINK PLAY         | 0,2 | 1   | 0   | 0   | 5000         | FC | 7750   | FH | 16 A |          |         |    |    |    |    |    |    |    |    |    |     |     |   | NA  | Remover dos A checks               |
| 321201-00-01-01 | LH MLG DOOR LUBRICATION         | 0,1 | 1   | 0   | 0   | 3000         | FH | 3000   | FH | 6 A  | 4A       | A4      |    |    |    | 6  |    |    | 6  |    |    |     | 6   |   | MAIN LANDING GEAR DOOR TO BE OPENED                       |                                    |
| 321201-00-01-02 | RH MLG DOOR LUBRICATION         | 0,1 | 1   | 0   | 0   | 3000         | FH | 3000   | FH | 6 A  | 4A       | A4      |    |    |    | 6  |    |    | 6  |    |    |     | 6   |   | MAIN LANDING GEAR DOOR TO BE OPENED                       |                                    |
| 321201-00-02-01 | LH MLG DOOR INSPECTION          | 0,1 | 1   | 0   | 0   | 3000         | FH | 3000   | FH | 6 A  | 4A       | A4      |    |    |    | 6  |    |    | 6  |    |    |     | 6   |   | MAIN LANDING GEAR DOOR TO BE OPENED                       |                                    |
| 321201-00-02-02 | RH MLG DOOR INSPECTION          | 0,1 | 1   | 0   | 0   | 3000         | FH | 3000   | FH | 6 A  | 4A       | A4      |    |    |    | 6  |    |    | 6  |    |    |     | 6   |   | MAIN LANDING GEAR DOOR TO BE OPENED                       |                                    |
| 322100-00-04-01 | NLG LUBRICATION                 | 0,1 | 1   | 0   | 0   | 750          | FC | 1162,5 | FH | 2 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA  |                                    |
| 322100-00-05-01 | NLG TORQUE LINK LUBRICATION     | 0,1 | 1   | 0   | 0   | 500          | FC | 775    | FH | 2 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA  |                                    |
| 322100-00-07-01 | NLG TORQUE LINK CENTER JOINT    | 0,1 | 1   | 0   | 0   | 1500         | FC | 2325   | FH | 5 A  | 2A       | A1      | 6  |    | 6  |    |    | 6  |    |    | 6  |     | 6   |   | NA  |                                    |
| 322100-00-08-01 | NLG TORQUE LINK HINGE POINTS    | 0,2 | 1   | 0   | 0   | 4000         | FC | 6200   | FH | 12 A |          |         |    |    |    |    |    |    |    |    |    |     |     |   | NA  | Remover dos A checks               |
| 322201-00-01-01 | NLG DOOR LUBRICATION            | 0,1 | 1   | 0   | 0   | 3000         | FH | 3000   | FH | 6 A  | 4A       | A4      |    |    |    | 6  |    |    | 6  |    |    |     | 6   |   | NA  |                                    |
| 323200-00-02-01 | LH MLG DOOR LOCK INSPECTION     | 0,1 | 1   | 0   | 0   | 3000         | FH | 3000   | FH | 6 A  | 4A       | A4      |    |    |    | 6  |    |    | 6  |    |    |     | 6   |   | NA  |                                    |
| 323200-00-02-02 | RH MLG DOOR LOCK INSPECTION     |     |     |     |     |              |    |        |    |      |          |         |    |    |    |    |    |    |    |    |    |     |     |   |   |                                    |

| Amtoss          | Description                       | M/H | MEN | M/H | MEN | MPD interval |    |      |    |      | Interval | Off set | A1 | A2 | A3 | A4 | A5 | A6 | A7 | A8 | A9 | A10 | A11 | A12 | Acessos Abertos                                    |
|-----------------|-----------------------------------|-----|-----|-----|-----|--------------|----|------|----|------|----------|---------|----|----|----|----|----|----|----|----|----|-----|-----|-----|--|
| 331000-00-50-01 | INSTR. & CONTROL PANEL LIGHTING   | 0,1 | 1   | 0   | 0   | 0            | 0  | 0    | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 331500-00-50-01 | OPC ANNUNCIATOR & WARNING         | 0,2 | 2   | 0   | 0   | 0            | 0  | 0    | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 334400-00-01-01 | LANDING LIGHT LUB                 | 0,1 | 1   | 0   | 0   | 2000         | FH | 2000 | FH | 4 A  | 4A       | A3      |    | 6  |    |    | 6  |    |    | 6  |    |     | 6   | NA  |  |
| 334400-00-01-02 | FLARE LIGHT LUB                   | 0,1 | 1   | 0   | 0   | 2000         | FH | 2000 | FH | 4 A  | 4A       | A3      |    | 6  |    |    | 6  |    |    | 6  |    |     | 6   | NA  |  |
| 334500-00-01-01 | TAXI LIGHT GEAR                   | 0,1 | 1   | 0   | 0   | 2000         | FH | 2000 | FH | 4 A  | 4A       | A3      |    | 6  |    |    | 6  |    |    | 6  |    |     | 6   | NA  |  |
| 341600-00-02-01 | FLIGHT MANAGEMENT SYSTEM INTERFAC | 0,1 | 1   | 0   | 0   | 1200         | FH | 1200 | FH | 2 A  | 2A       | A2      |    | 6  |    | 6  |    |    | 6  |    |    | 6   |     | 6   | NA   |
| 351101-00-50-01 | CREW OXYGEN BOTTLE                | 0,1 | 1   | 0   | 0   | 0            | 0  | 0    | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 351102-00-50-01 | SMOKE MASK                        | 0,2 | 1   | 0   | 0   | 0            | 0  | 0    | FH | 0 A  | 4A       | A4      |    |    | 6  |    |    |    | 6  |    |    |     |     | 6   | NA   |
| 351102-00-51-01 | OXYGEN MASKS                      | 0,2 | 1   | 0   | 0   | 0            | 0  | 0    | FH | 0 A  | 4A       | A2      |    | 6  |    |    | 6  |    |    |    |    | 6   |     |     | NA   |
| 353100-00-02-01 | PORTABLE OXYGEN                   | 0,1 | 1   | 0   | 0   | 3            | MO | 3    | MO | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 353100-00-05-01 | PORTABLE OXYGEN MASKS             | 0,3 | 1   | 0   | 0   | 6            | YR | 6    | YR | 0 A  | 2A       | A1      | 6  |    | 6  |    | 6  |    |    | 6  |    |     | 6   |     | NA   |
| 353103-00-01-01 | SMOKE MASK CHECK                  | 0,1 | 1   | 0   | 0   | 3,5          | MO | 3,5  | MO | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 360000-00-08-01 | BLEED DUCT LEAK INDICATION        | 0,3 | 2   | 0,1 | 1   | 5000         | FH | 5000 | FH | 10 A | 6A       | A3      |    |    | 6  |    |    |    |    | 6  |    |     |     |     | 178BR  |
| 360000-00-15-01 | DUCT LEAK INDICATION              | 0,1 | 1   | 0   | 0   | 600          | FH | 600  | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 360000-01-18-01 | ENG 1 PRSOV FILTER CHANGE         | 0,3 | 1   | 0,1 | 1   | 4000         | FH | 4000 | FH | 8 A  | 4A       | A3      |    |    | 6  |    |    |    | 6  |    |    |     | 6   |     | 412HB  |
| 360000-01-18-02 | ENG 2 PRSOV FILTER CHANGE         | 0,3 | 1   | 0,1 | 1   | 4000         | FH | 4000 | FH | 8 A  | 4A       | A3      |    |    | 6  |    |    |    | 6  |    |    |     | 6   |     | 422HB  |
| 360000-01-19-01 | ENG 1 TMSOV FILTER CHANGE         | 0,3 | 1   | 0,1 | 1   | 4000         | FH | 4000 | FH | 8 A  | 4A       | A3      |    |    | 6  |    |    |    | 6  |    |    |     | 6   |     | 412FB  |
| 360000-01-19-02 | ENG 2 TMSOV FILTER CHANGE         | 0,3 | 1   | 0,1 | 1   | 4000         | FH | 4000 | FH | 8 A  | 4A       | A3      |    |    | 6  |    |    |    | 6  |    |    |     | 6   |     | 422FB  |
| 381200-00-50-01 | WATER HEATER                      | 0,1 | 1   |     |     | 0            | 0  | 0    | FH | 0 A  | 1A       | A1      | 4  | 4  | 4  | 4  | 4  | 4  | 4  | 4  | 4  | 4   | 4   | 4   | NA   |
| 381206-00-50-01 | FWD TOILET SERVICE PANEL          | 0,1 | 1   |     |     | 0            | 0  | 0    | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 381206-00-50-02 | REAR TOILET SERVICE PANEL         | 0,1 | 1   |     |     | 0            | 0  | 0    | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 381206-00-51-01 | OPC WATER QUANTITY INDICATION     | 0,5 | 1   |     |     | 0            | 0  | 0    | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | 163AL  |
| 383100-00-56-01 | WASTE TANK FLUSH                  | 0,2 | 1   |     |     |              |    | 0    |    |      | 1A       | A2      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | 123CL, 195 AL                                      |
| 491000-00-02-01 | APU ENCLOSURE                     | 0,3 | 1   | 0,1 | 1   | 1000         | FH | 1000 | FH | 2 A  | 6A       | A4      |    |    | 6  |    |    |    |    |    |    |     | 6   |     | 311DZ, 315AB                                       |
| 492000-00-01-01 | APU OIL MAGNETIC DRAIN            | 0,1 | 1   | 0,1 | 1   | 750          | AH | 1500 | FH | 3 A  | 2A       | A2      |    | 6  |    | 6  |    |    | 6  |    |    |     | 6   |     | 311DZ, 315AB                                       |
| 493000-00-01-01 | APU FUEL FILTER CHANGE            | 0,4 | 1   | 0,1 | 1   | 1200         | AH | 2400 | FH | 5 A  | 4A       | A3      |    | 6  |    |    |    |    | 6  |    |    |     | 6   |     | 311DZ, 315AB                                       |
| 493000-00-02-01 | APU FUEL LEAK CHECK               | 0,1 | 1   | 0,1 | 1   | 2400         | AH | 4800 | FH | 10 A | 6A       | A6      |    |    |    |    | 6  |    |    |    |    |     | 6   |     | 311DZ, 315AB                                       |
| 494000-00-01-01 | APU IGNITER PLUG                  | 0,3 | 1   | 0,1 | 1   | 1000         | AH | 2000 | FH | 4 A  | 4A       | A4      |    |    | 6  |    |    |    | 6  |    |    |     | 6   |     | 311DZ, 315AB                                       |
| 494000-00-02-01 | APU STARTER MOTOR BRUSHES         | 0,3 | 1   | 0,2 | 1   | 3000         | AH | 6000 | FH | 12 A | 6A       | A4      |    |    | 6  |    |    |    |    |    |    |     | 6   |     | 311BZ, 311DZ, 315AB                                |
| 495100-00-02-01 | APU INLET DUCT INSPECTION         | 1,4 | 1   | 0,1 | 1   | 1200         | AH | 2400 | FH | 5 A  | 4A       | A4      |    |    | 6  |    |    |    | 6  |    |    |     | 6   |     | 311DZ, 315AB                                       |
| 499000-00-03-01 | APU OIL & FILTER CHANGE           | 0,5 | 1   | 0,1 | 1   | 900          | AH | 1800 | FH | 4 A  | 4A       | A2      |    | 6  |    |    | 6  |    |    |    |    |     | 6   |     | 311CZ, 315AB                                       |
| 499000-00-04-01 | APU OIL LEAK CHECK                | 0,1 | 1   | 0,1 | 1   | 2400         | AH | 4800 | FH | 10 A | 4A       | A2      |    | 6  |    |    | 6  |    |    |    |    |     | 6   |     | 311DZ, 315AB                                       |
| 520000-00-51-01 | FWD PAX DOOR TAMPER SEAL          | 0,8 | 1   |     |     | 0            | 0  | 0    | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 520000-00-51-02 | FWD S/E DOOR TAMPER SEAL          | 0,8 | 1   |     |     | 0            | 0  | 0    | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 520000-00-51-03 | AFT S/E DOOR TAMPER SEAL          | 0,8 | 1   |     |     | 0            | 0  | 0    | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 520000-00-51-04 | FWD CARGO DOOR TAMPER SEAL        | 0,8 | 1   |     |     | 0            | 0  | 0    | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 520000-00-51-05 | CENTER CARGO DOOR TAMPER SEAL     | 0,8 | 1   |     |     | 0            | 0  | 0    | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 520000-00-51-06 | REAR CARGO DOOR TAMPER SEAL       | 0,8 | 1   |     |     | 0            | 0  | 0    | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 520000-00-51-07 | ACCESS HATCHES TAMPER SEAL        | 0,8 | 1   |     |     | 0            | 0  | 0    | FH | 0 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 521101-00-50-01 | PASSENGER DOOR SEAL INSPECTION    | 0,2 | 1   |     |     | 0            | 0  | 0    | FH | 0 A  | 2A       | A2      |    | 6  |    | 6  |    |    | 6  |    |    |     | 6   |     | NA   |
| 521103-00-07-01 | FWD PAX DOOR LOCK-MECH            | 0,3 | 1   | 0   | 0   | 4000         | FH | 4000 | FH | 8 A  | 4A       | A2      |    | 6  |    |    |    |    | 6  |    |    |     | 6   |     | PAX DOOR TO BE OPENED, LINNING OF UPPER TORSION BC |
| 521105-00-01-01 | FWD PAX DOOR LUBRICATION          | 0,1 | 1   | 0   | 0   | 1000         | FH | 1000 | FH | 2 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 521151-00-01-01 | FWD PAX DOOR STRUCTURE            | 0,2 | 1   | 0   | 0   | 2400         | FH | 2400 | FH | 5 A  | 4A       | A2      |    | 6  |    |    |    |    | 6  |    |    |     | 6   |     | NA   |
| 523003-00-01-01 | FWD & CTR CARGO DOOR HINGE LUB    | 0,2 | 1   | 0   | 0   | 1000         | FH | 1000 | FH | 2 A  | 2A       | A2      |    | 6  |    | 6  |    |    | 6  |    |    |     | 6   |     | NA   |
| 523003-00-01-02 | REAR CARGO DOOR HINGE LUB         | 0,1 | 1   | 0   | 0   | 1000         | FH | 1000 | FH | 2 A  | 2A       | A2      |    | 6  |    | 6  |    |    | 6  |    |    |     | 6   |     | NA   |
| 523051-00-02-01 | FWD CARGO DOOR AREA               | 0,1 | 1   | 0   | 0   | 2400         | FH | 2400 | FH | 5 A  | 4A       | A2      |    | 6  |    |    | 6  |    |    |    |    | 6   |     |     | CARGO DOORS TO BE OPENED                           |
| 523051-00-02-02 | CENTER CARGO DOOR AREA            | 0,1 | 1   | 0   | 0   | 2400         | FH | 2400 | FH | 5 A  | 4A       | A2      |    | 6  |    |    | 6  |    |    |    |    | 6   |     |     | CARGO DOORS TO BE OPENED                           |
| 523051-00-02-03 | REAR CARGO DOOR AREA              | 0,1 | 1   | 0   | 0   | 2400         | FH | 2400 | FH | 5 A  | 4A       | A2      |    | 6  |    |    | 6  |    |    |    |    | 6   |     |     | CARGO DOORS TO BE OPENED                           |
| 524102-00-03-01 | FWD S/E DOOR LOCK INSPECTION      | 0,1 | 1   | 0   | 0   | 3600         | FH | 3600 | FH | 7 A  | 6A       | A4      |    |    |    |    | 6  |    |    |    |    |     | 6   |     | FWD S/E DOOR TO BE OPENED.                         |
| 524151-00-01-01 | FWD S/E DOOR STRUCTURE            | 0,1 | 1   | 0   | 0   | 2400         | FH | 2400 | FH | 5 A  | 4A       | A2      |    | 6  |    |    | 6  |    |    |    |    |     | 6   |     | NA   |
| 524502-00-03-01 | AFT S/E DOOR LOCK INSPECTION      | 0,1 | 1   | 0   | 0   | 3000         | FH | 3000 | FH | 6 A  | 6A       | A6      |    |    |    |    | 6  |    |    |    |    |     | 6   |     | REAR S/E DOOR TO BE OPENED.                        |
| 524551-00-01-01 | AFT S/E DOOR STRUCTURE            | 0,1 | 1   | 0   | 0   | 2000         | FH | 2000 | FH | 4 A  | 4A       | A2      |    | 6  |    |    | 6  |    |    |    |    |     | 6   |     | NA   |
| 525100-00-03-01 | PRESSURE LATCH ADJUSTMENT/TEST    | 0,2 | 1   | 0   | 0   | 3000         | FH | 3000 | FH | 6 A  | 6A       | A6      |    |    |    |    | 6  |    |    |    |    |     | 6   |     | NA   |
| 527100-00-02-01 | DOOR SHORT CIRCUIT INDICATION     | 0,1 | 1   | 0   | 0   | 500          | FH | 500  | FH | 1 A  | 1A       | A1      | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6   | NA   |
| 533002-00-02-01 | CENTER FUSELAGE SKIN              | 0,1 | 1   | 0   | 0   | 2400         | FH | 2400 | FH | 5 A  | 4A       | A4      |    |    | 6  |    |    |    | 6  |    |    |     | 6   |     | NA   |
| 533014-00-01-01 | CENTER CARGO DOOR FITTINGS        | 0,1 | 1   | 0   | 0   | 2400         | FH | 2400 | FH | 5 A  | 4A       | A4      |    |    | 6  |    |    |    | 6  |    |    |     | 6   |     | LINING PANELS ON TOP OF DOOR OPENINGS TO BE REMOV  |
| 533014-00-01-02 | FWD CARGO DOOR FITTINGS           | 0,1 | 1   | 0   | 0   | 2400         | FH | 2400 | FH | 5 A  | 4A       | A4      |    |    | 6  |    |    |    | 6  |    |    |     | 6   |     | LINING PANELS ON TOP OF DOOR OPENINGS TO BE REMOV  |
| 534110-00-02-01 | REAR FUSELAGE SKIN                | 0,3 | 1   | 0   | 0   | 2400         | FH | 2400 | FH | 5 A  | 4A       | A1      |    |    | 6  |    |    |    | 6  |    |    |     | 6   |     | NA   |

| Amtoss          | Description                     | M/H  | MEN | M/H | MEN | MPD interval |    |      | Interval | Off set | A1  | A2 | A3 | A4 | A5 | A6 | A7 | A8 | A9 | A10 | A11 | A12                          | Acessos Abertos |
|-----------------|---------------------------------|------|-----|-----|-----|--------------|----|------|----------|---------|-----|----|----|----|----|----|----|----|----|-----|-----|------------------------------|-----------------|
| 534116-00-01-01 | REAR CARGO DOOR FITTINGS        | 0,2  | 1   | 0   | 0   | 2400         | FH | 2400 | FH       | 5 A     | 4A  | A4 |    | 6  |    |    | 6  |    |    |     | 6   | AFT CARGO DOOR TO BE OPENED. |                 |
| 534300-00-50-01 | SPEEDBRAKE LEADING EDGE SIM     | 0,1  | 1   |     |     | 0            | 0  | 0    | FH       | 0 A     | 4A  | A1 | 6  |    | 6  |    |    |    | 6  |     |     | NA                           |                 |
| 551200-00-50-01 | STABILIZER SETTING MARKS        | 0,1  | 1   |     |     | 0            | 0  | 0    | FH       | 0 A     | 4A  | A1 | 6  |    | 6  |    |    |    | 6  |     |     | NA                           |                 |
| 564100-00-51-01 | FWD CARGO DOOR WINDOW           | 0,2  | 1   |     |     | 0            | 0  | 0    | FH       | 0 A     | 1A  | A1 | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6                            | NA              |
| 564100-00-51-02 | CENTER CARGO DOOR WINDOW        | 0,2  | 1   |     |     | 0            | 0  | 0    | FH       | 0 A     | 1A  | A1 | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6                            | NA              |
| 564100-00-51-03 | REAR CARGO DOOR WINDOW          | 0,2  | 1   |     |     | 0            | 0  | 0    | FH       | 0 A     | 1A  | A1 | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6                            | NA              |
| 564200-00-50-01 | OBSERVATION WINDOW              | 0,2  | 1   |     |     | 0            | 0  | 0    | FH       | 0 A     | 2A  | A1 | 6  |    | 6  |    |    | 6  |    |     | 6   | NA                           |                 |
| 574100-00-50-01 | LH BLACK PAINT STRIP            | 0,1  | 1   |     |     | 0            | 0  | 0    | FH       | 0 A     | 1A  | A1 | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6                            | NA              |
| 574100-00-50-02 | RH BLACK PAINT STRIP            | 0,1  | 1   |     |     | 0            | 0  | 0    | FH       | 0 A     | 1A  | A1 | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6                            | NA              |
| 710000-00-50-01 | ENG 1 IDLE RUN                  | 0,2  | 2   |     |     | 0            | 0  | 0    | FH       | 0 A     | 1A  | A1 | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6                            | 432EB           |
| 710000-00-50-02 | ENG 2 IDLE RUN                  | 0,2  | 2   |     |     | 0            | 0  | 0    | FH       | 0 A     | 1A  | A1 | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6                            | 442EB           |
| 720101-00-50-01 | ENG 1 OIL FILTER REPLACEMENT    | 1    | 1   |     |     | 0            |    | 0    | FH       | 0 A     | 12A | A6 |    |    | 6  |    |    |    |    |     |     |                              | COWL DOORS      |
| 720101-00-50-02 | ENG 2 OIL FILTER REPLACEMENT    | 1    | 1   |     |     | 0            |    | 0    | FH       | 0 A     | 12A | A6 |    |    | 6  |    |    |    |    |     |     |                              | COWL DOORS      |
| 723010-00-03-01 | ENG 1 SPINNER CONE INSPECTION   | 0,1  | 1   |     |     | 600          | FC | 930  | FH       | 2 A     | 1A  | A1 | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6                            | NA              |
| 723010-00-03-02 | ENG 2 SPINNER CONE INSPECTION   | 0,1  | 1   |     |     | 600          | FC | 930  | FH       | 2 A     | 1A  | A1 | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6                            | NA              |
| 723500-00-05-01 | ENG 1 FRONT LINK MOUNTING       | 0,1  | 1   | 0,1 | 1   | 2400         | FH | 2400 | FH       | 5 A     | 4A  | A1 | 6  |    | 6  |    |    | 6  |    |     | 6   | 432JL                        |                 |
| 723500-00-05-02 | ENG 2 FRONT LINK MOUNTING       | 0,1  | 1   | 0,1 | 1   | 2400         | FH | 2400 | FH       | 5 A     | 4A  | A1 | 6  |    | 6  |    |    | 6  |    |     | 6   | 442JL                        |                 |
| 725200-00-01-01 | ENG 1 LP3 TURBINE BLADES CHECK  | 0,2  | 1   | 0   | 0   | 1200         | FH | 1200 | FH       | 2 A     | 2A  | A1 | 6  |    | 6  |    | 6  |    | 6  |     | 6   | NA                           |                 |
| 725200-00-01-02 | ENG 2 LP3 TURBINE BLADES CHECK  | 0,2  | 1   | 0   | 0   | 1200         | FH | 1200 | FH       | 2 A     | 2A  | A1 | 6  |    | 6  |    | 6  |    | 6  |     | 6   | NA                           |                 |
| 725200-00-02-01 | ENG 1 LPT SUPPORT FAIRINGS      | 0,1  | 1   | 0   | 0   | 1000         | FH | 1000 | FH       | 2 A     | 2A  | A2 |    | 6  |    | 6  |    | 6  |    |     | 6   | NA                           |                 |
| 725200-00-02-02 | ENG 2 LPT SUPPORT FAIRINGS      | 0,1  | 1   | 0   | 0   | 1000         | FH | 1000 | FH       | 2 A     | 2A  | A2 |    | 6  |    | 6  |    | 6  |    |     | 6   | NA                           |                 |
| 725300-00-01-01 | ENG 1 MIXER CONTROL             | 0,1  | 1   | 0   | 0   | 1200         | FH | 1200 | FH       | 2 A     | 2A  | A2 |    | 6  |    | 6  |    | 6  |    |     | 6   | NA                           |                 |
| 725300-00-01-02 | ENG 2 MIXER CONTROL             | 0,1  | 1   | 0   | 0   | 1200         | FH | 1200 | FH       | 2 A     | 2A  | A2 |    | 6  |    | 6  |    | 6  |    |     | 6   | NA                           |                 |
| 730000-00-01-01 | ENG 1 LP FUEL FILTER CHANGE     | 0,3  | 1   | 0,1 | 1   | 750          | FH | 750  | FH       | 2 A     | 2A  | A1 | 6  |    | 6  |    | 6  |    | 6  |     | 6   | 432EB                        |                 |
| 730000-00-01-02 | ENG 2 LP FUEL FILTER CHANGE     | 0,3  | 1   | 0,1 | 1   | 750          | FH | 750  | FH       | 2 A     | 2A  | A1 | 6  |    | 6  |    | 6  |    | 6  |     | 6   | 442EB                        |                 |
| 730000-00-04-01 | APPROACH IDLE INDICATOR         | 0,1  | 1   | 0   | 0   | 1200         | FH | 1200 | FH       | 2 A     | 2A  | A1 | 6  |    | 6  |    | 6  |    | 6  |     | 6   | NA                           |                 |
| 740000-00-01-01 | OPC IGNITION SYSTEM LH/RH       | 0,2  | 2   | 0   | 0   | 600          | FH | 600  | FH       | 1 A     | 1A  | A1 | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6                            | NA              |
| 740000-00-50-01 | ENG#1 DISCARD THE IGNITER PLUG  | 0,75 | 1   |     |     | 0            | 0  | 0    | FH       | 0 A     | 3A  | A1 | 6  |    | 6  |    | 6  |    |    |     | 6   | COWL DOORS                   |                 |
| 740000-00-50-02 | ENG#2 DISCARD THE IGNITER PLUG  | 0,75 | 1   |     |     | 0            | 0  | 0    | FH       | 0 A     | 3A  | A2 |    | 6  |    | 6  |    |    |    |     | 6   | COWL DOORS                   |                 |
| 761100-00-50-01 | ENG 1 THRUST CONTROL IN NACELLE | 0,2  | 1   |     |     | 0            | 0  | 0    | FH       | 0 A     | 2A  | A2 | 6  |    | 6  |    | 6  |    |    |     | 6   | NA                           |                 |
| 761100-00-50-02 | ENG 2 THRUST CONTROL IN NACELLE | 0,2  | 1   |     |     | 0            | 0  | 0    | FH       | 0 A     | 2A  | A2 |    | 6  |    | 6  |    | 6  |    |     | 6   | NA                           |                 |
| 762000-00-01-01 | FUC ENGINE EMERG. SHUTDOWN      | 0,2  | 2   | 0,1 | 1   | 1000         | FH | 1000 | FH       | 2 A     | 4A  | A3 |    | 6  |    | 6  |    |    |    |     | 6   | 315AB                        |                 |
| 773100-00-01-01 | ENG CHANNEL DISAGREE INDICATION | 0,2  | 1   |     |     | 1000         | FH | 1000 | FH       | 2 A     | 2A  | A2 |    | 6  |    | 6  |    | 6  |    |     | 6   | NA                           |                 |
| 774400-00-03-01 | ENG 1 EPR MANIFOLD CHECK        | 0,1  | 1   | 0,1 | 1   | 2400         | FH | 2400 | FH       | 5 A     | 6A  | A1 | 6  |    |    |    | 6  |    |    |     |     | 432EB                        |                 |
| 774400-00-03-02 | ENG 2 EPR MANIFOLD CHECK        | 0,1  | 1   | 0,1 | 1   | 2400         | FH | 2400 | FH       | 5 A     | 6A  | A1 | 6  |    |    |    | 6  |    |    |     |     | 442EB                        |                 |
| 774700-00-01-01 | ENG OIL QTY TRANSMITTER         | 0,2  | 1   | 0,1 | 1   | 600          | FH | 600  | FH       | 1 A     | 2A  | A2 |    | 6  |    | 6  |    | 6  |    |     | 6   | 432GL                        |                 |
| 783000-00-50-01 | ENG 1 THRUST REV SEC-LOCK LUB   | 0,2  | 1   |     |     | 0            | 0  | 0    | FH       | 0 A     | 1A  | A1 | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6                            | NA              |
| 783000-00-50-02 | ENG 2 THRUST REV SEC-LOCK LUB   | 0,2  | 1   |     |     | 0            | 0  | 0    | FH       | 0 A     | 1A  | A1 | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6                            | NA              |
| 801000-00-01-01 | ENG 1 STARTER OIL CHECK         | 0,2  | 1   | 0,1 | 1   | 500          | FC | 775  | FH       | 2 A     | 1A  | A1 | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6                            | 432EB           |
| 801000-00-01-02 | ENG 2 STARTER OIL CHECK         | 0,2  | 1   | 0,1 | 1   | 500          | FC | 775  | FH       | 2 A     | 1A  | A1 | 6  | 6  | 6  | 6  | 6  | 6  | 6  | 6   | 6   | 6                            | 442EB           |
| 801000-00-02-01 | ENG 1 STARTER OIL CHANGE        | 0,3  | 1   | 0,1 | 1   | 2000         | FC | 3100 | FH       | 6 A     | 2A  | A1 | 6  |    | 6  |    | 6  |    |    |     | 6   | 432EB                        |                 |
| 801000-00-02-02 | ENG 2 STARTER OIL CHANGE        | 0,3  | 1   | 0,1 | 1   | 2000         | FC | 3100 | FH       | 6 A     | 2A  | A1 | 6  |    | 6  |    | 6  |    |    |     | 6   | 442EB                        |                 |

Total 213 131 133 131 132 130 140 130 131 132 134 129 136 132,416667

PARA EXECUÇÃO DE TAREFAS

Horas 33,7 30,8 34,75 31,35 34,2 31,75 34,5 31,45 33,35 30,5 34,2 30,8 média 32,6125

Minutos

Acessos 3,3 5,1 3,7 4,3 3,3 6,1 3,9 4,2 3,4 6,4 3,8 4,6 média 4,34166667

|        | A1  | A2   | A3    | A4    | A5   | A6    | A7   | A8    | A9    | A10  | A11 | A12  |                   |
|--------|-----|------|-------|-------|------|-------|------|-------|-------|------|-----|------|-------------------|
| Total  | 37  | 35,9 | 38,45 | 35,65 | 37,5 | 37,85 | 38,4 | 35,65 | 36,75 | 36,9 | 38  | 35,4 | média 36,95416667 |
| Cartas | 131 | 133  | 131   | 132   | 130  | 140   | 130  | 131   | 132   | 134  | 129 | 136  | média 132,416667  |